
Tora 5 × 3 m

Dimensions for preparing the base and checking the available space.

GENERAL ARRANGEMENT

Closed roof shown

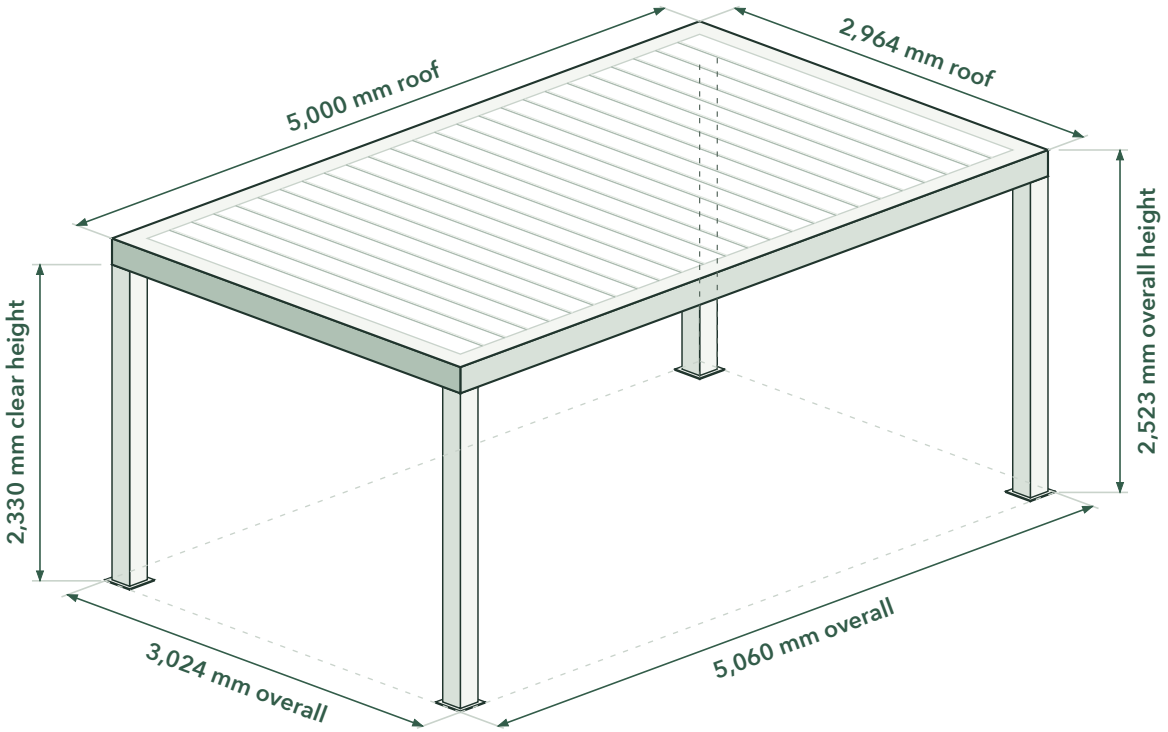

Dimensions at a glance

All dimensions in millimetres

Overall footprint **3,024 × 5,060 mm**	Clear between posts **2,664 × 4,700 mm**
Roof dimensions **2,964 × 5,000 mm**	Both inner-corner diagonals **5,402.5 mm**
Clear height below frame **2,330 mm**	Overall height - roof closed **2,523 mm**
Overall height - open louvres at 132° **2,572.5 mm**	Maximum during opening - at 48° **2,596.4 mm**


Open louvre heights are calculated from the 2,523 mm frame height plus the louvre projection.
Clear height includes base plate thickness. Drawings are schematic and not to scale.

Set-out & roof clearance

Check the four foot positions and the highest point through the roof movement.

GROUND PLAN

Roof omitted for clarity

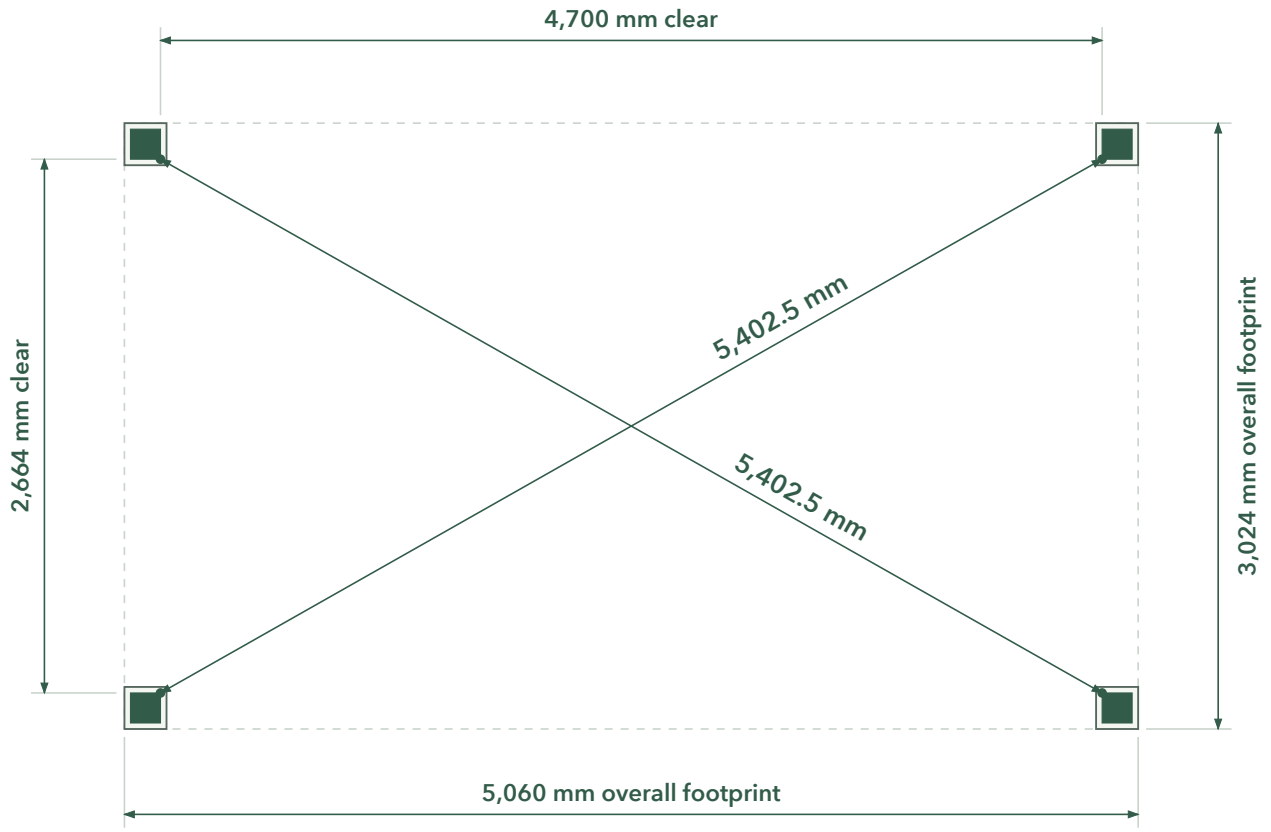

150 × 150 mm post

Overall footplate envelope

Measure both diagonals between the marked inner post corners. Both must match.

Louvre positions

Frame datum: 2,523 mm above the base

CLOSED

Roof closed




2,523 mm

overall height

MAXIMUM HEIGHT

Louvres and mechanism at 48°

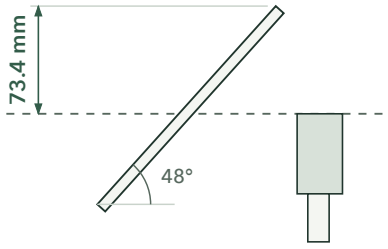


2,596.4 mm

overall height (calculated)

FULLY OPEN AT 132°

Louvres and mechanism at 132°

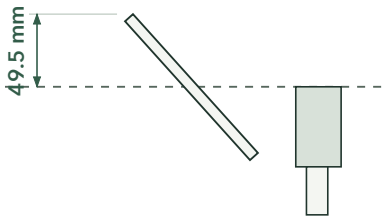

2,572.5 mm

overall height (calculated)

Check overhead space against the maximum 2,596.4 mm height during opening.

Prepare the base

- Base must be flat and level, with a maximum fall of 10 mm in one direction.
- This ensures correct drainage, stability and alignment of screens and slatted walls.
- Excessive or multi-directional slopes can cause installation and operational issues.
- Uneven bases may affect slatted wall stacking and the smooth operation of side screens.

Surface checks

Existing Base

- Check the existing base for twisting or sinking.
- Correct uneven areas so flags are level and joints smooth.
- Refer to the diagram for the solid depth required beneath each pergola foot.

Paving / Indian Stone

- Ensure all flags are level and joints are smooth.
- Refer to the diagram for the solid depth required beneath each pergola foot.

Concrete

- Create a solid, flat and level base.
- See the diagram for the solid depth required beneath each pergola foot.
- Paving can be added after installation; however, the pergola footplates must remain above the paving level to allow for drainage.


Porcelain / Granite

- Tell LuxSol before installation. Diamond drilling is required and carries an extra fitting charge.

Decking

- Traditional timber and composite decking are suitable.
- Ensure solid timber joists are present beneath each pergola foot.


PAVED / CONCRETE BASE

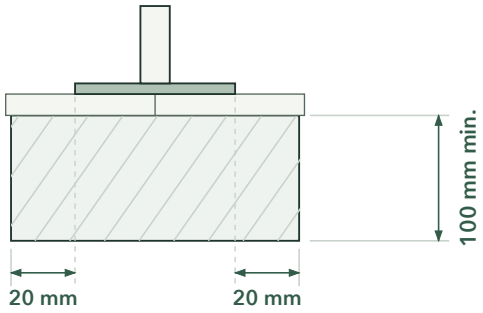

Solid concrete

Extend 20 mm beyond each side of the footplate.
Compacted hardcore alone is insufficient.

DECKING BASE

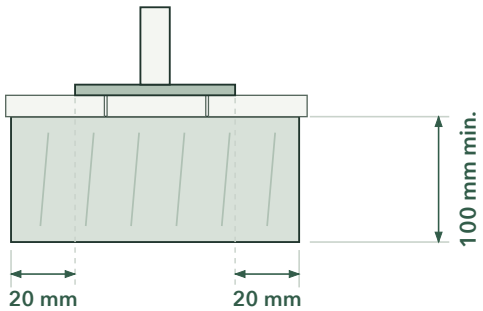

Solid timber joist

Extend 20 mm beyond each side of the footplate.
Fix into joists; deck boards alone are insufficient.

Before installation

- ✓ Leave working room within and around the base area and feet.
- ✓ Check the full louvre movement beneath eaves, branches and lights.
- ✓ Confirm actual fixing positions against the pergola before drilling.
- ✓ Arrange the electrical supply with a qualified electrician.

Support sections are schematic. Use this guide with the supplied installation manual.